



Introduction
Commissioning
Troubleshooting

SW_V2.3 & SW_2.1.4



Technical specifications	
Working voltage	85 ~ 264VAC (47 ~63Hz)
Maximum current draw	0.4A
Nominal output voltage	27.6VDC
Maximum output current	2A
Maximum battery charge current	0.7Ah
Maximum battery-capacity	2 x 12v 7Ah
Battery shutdown voltage	19.5VDC
Secondary fuses	2 x pico 3.15A
Outputs	1x relay fault 30V 2A (no/c/nc) & 2x Aux 24VDC max 2A
Protection class	IP40
Isolation class	I
Operation temperature	from -5°C to 40°C
Material	Metal
Colour Code	Ral 7038 or Ral 7012
Dimensions	324 x 325 x 80 mm
Weight	3 kg





Indicator guide

Indicator	Color	Identifier	Description
ON	Green	Indicates that the device is on	In normal mode, it is on and in case of power failure or there is a problem in the power supply, it will blink
FAULT	Yellow	Indicates an fault	If there is any fault in the system, it will be turned on
EARTH	Yellow	Indicates an earthfault	If the positive or negative line is connected to the ground, it lights up
BATTERY	Yellow	Indicates battery failure	It turns on when the battery is damaged and flashes when the battery is not recognized
OUTPUT	Red	Indicates the status of outputs	In normal mode, it blinks, which increases with the increase in consumption. In case of a short circuit in the output or an increase in consumption above the permissible limit, it remains fully lit.
CHARGE STATE	Red	Indicates the battery charge status	It is on when the battery is charging. When the battery is fully charged, it blinks and when there is no battery, it is off


Terminals guide

28V IN	Input terminal from switching power supply (27.6V)
FUSE BATT	Battery protection fuse (3.15A)
BATT	Battery connection terminals (2x12V)
RELAY FLT	Output relay terminals for Fault in the system (NO COM NC)
FUSE AUX	Output protection fuse (if the electronic protection does not work)
AUX 1	Output number 1 (+/-)
AUX 2	Output number 2 (+/-)
L	phase input terminal (85 ~ 264VAC)
N	Null input terminal (85 ~ 264VAC)
⏏	Ground input terminal
+V	Switching power supply output terminal
-V	Switching power supply output terminal
J1	Enabling or disabling the earth fault jumper (on the board)

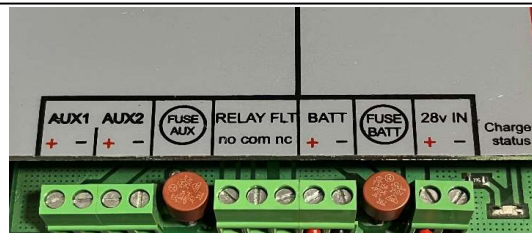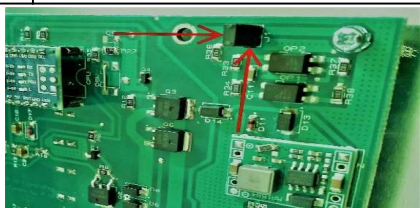


Installation and commissioning

Open the four screws on the device door. (1)

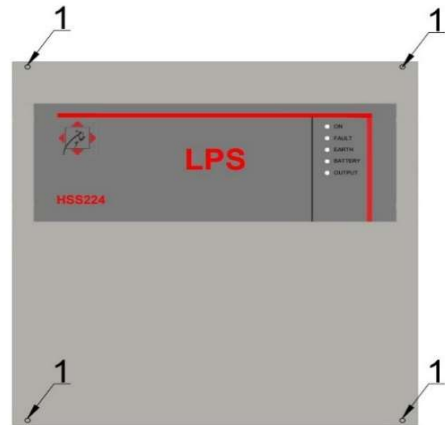

Open the two 28v IN power supply wires (2)


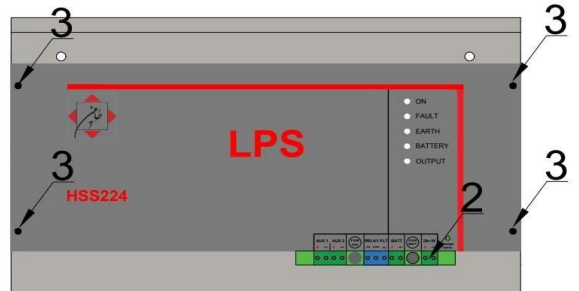


open the four screws at the corner of the screen (3).

Install the device in place with four suitable screws (4)
(if necessary, open the switching power supply from the
bottom of the device (5))

Reinstall the screen and connect the two 28V
power supply wires whatchful the polarity. (3) (2)


Connect the 220V power cable to the /L/N/ \perp
terminals. (6) (Make sure the power is off before
closing)

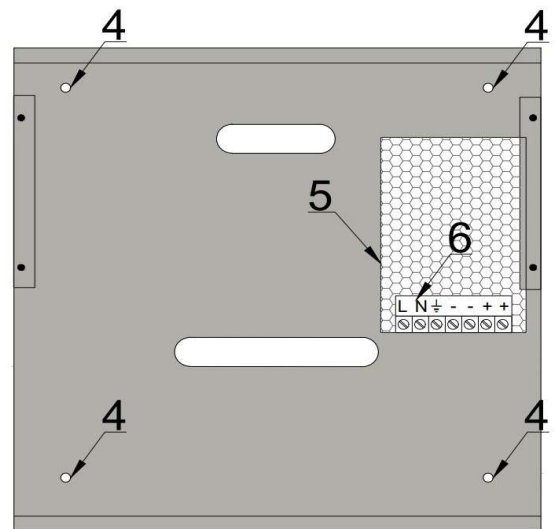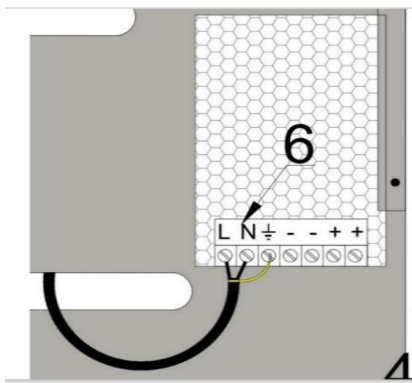

Connect the consumer cable to the AUX1/AUX2 terminals (7) (make sure the polarity is correct)

Put in two 12V batteries inside the device (8)

Connect the battery terminal wires (9) (pay attention to the polarity of the batteries, wrong connection will burn the fuse and damage to the device)

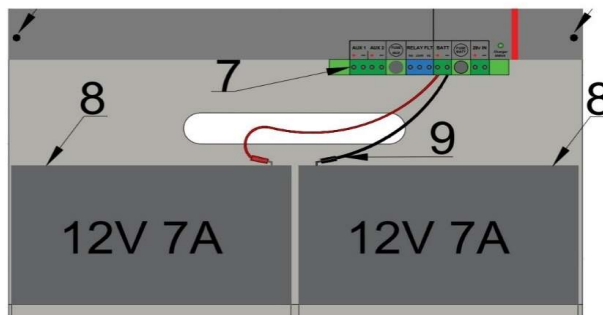

Close the device door and connect the mains power.

After a few seconds, the green LED of the device turns on and the red OUTPUT LED starts flashing.

The device has the ability to work 24/7 and full load.

troubleshooting

ON LED is blinking and FAULT LED is on and the battery is not charging.	The power of the device is cut off or the board input power supply is less than 27.6 volts (the switching power supply is defective)
The green ON LED is blinking, and the OUTPUT LED is on.	The input power of the board is less than 27.6 volts (the switching power supply is defective) and the batteries are not connected, in this case the outputs are disabled.
FAULT LED and OUTPUT LED are on.	The consumption is higher than 2 amps, or there is a short circuit in the outputs, or the AUX fuse is burnt. By solving the problem, the outputs will be activated after 30 seconds.
The batteries are connected, but the BATTERY LED is flashing and the FAULT LED is on.	The total voltage of the batteries is less than 19 volts or the FUSE BATT is burnt
FAULT LED and EARTH LED are on.	A ground connection error has been detected on the positive or negative wire of the outputs. (check the route and cable of the consumers).
BATTERY LED and FAULTLED are on.	The batteries are damaged (replace them. After 15 minutes of replacing the batteries, the error will be resolved).

